

BMW X1(F48)/X2(F39) Installation Guide



1. Original Monitor(Power off before installation).




2. Pry loose and take out the panel.



3. Take out the decorative sheet of air-conditioning.



4. Remove two fixed screws of original monitor.

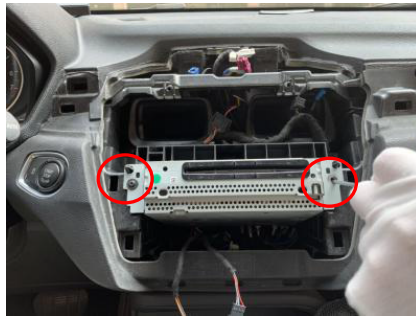

5. Remove two fixed screws of original Host.



6. Pull out original harness and optical fiber, then plug it with Android power harness.



7. Remove the four Buckles on original stand base, and assemble it to Android stand base.



8. Install well the android device stand base to and then place well the cables.




9. Plug well all the android cables. (Power/USB/4G/GPS)




10. Effect photo after installation well.


If your car has EVO system, please check the AUX-USB adapter cable as shown below(if your car has NBT system, then just ignore this wiring diagram).

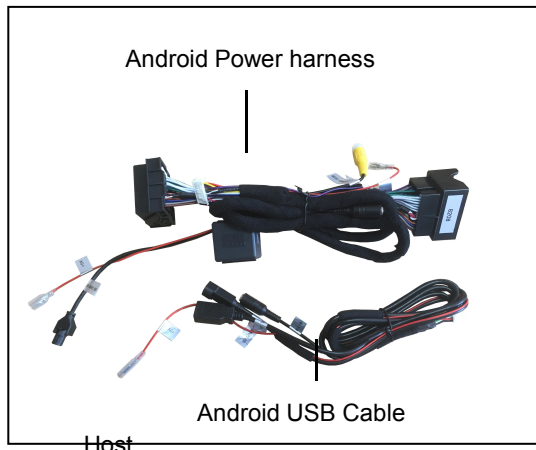


1. Android Power harness and USB Cable.

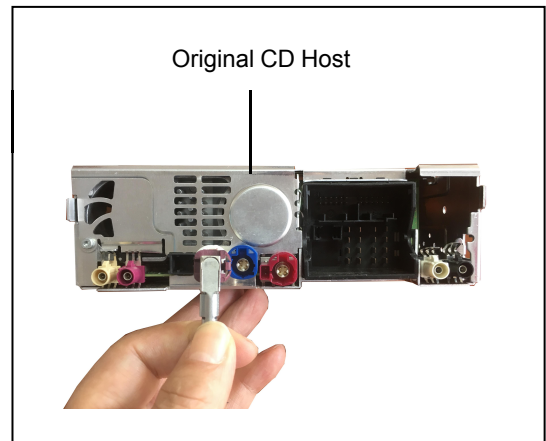

2. Remove USB cable from original CD HOST.

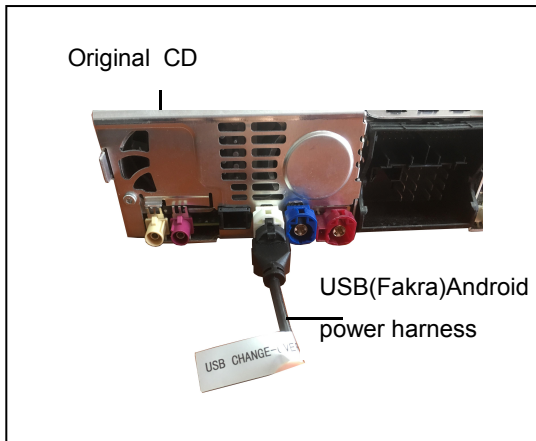


3. Plug the 4PIN Fakra to original CD host.

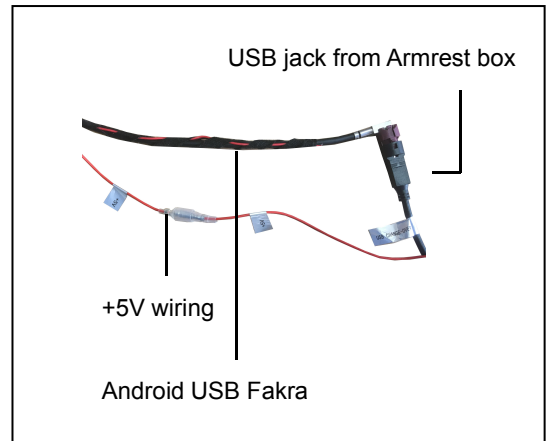

4. Remove the USB plug (Fakra) and connect it with android USB cable(Fakra), then connect well the +5V to Android cable.



Pull out the original pow harness and optical fiber, then plug it with Android power harness.

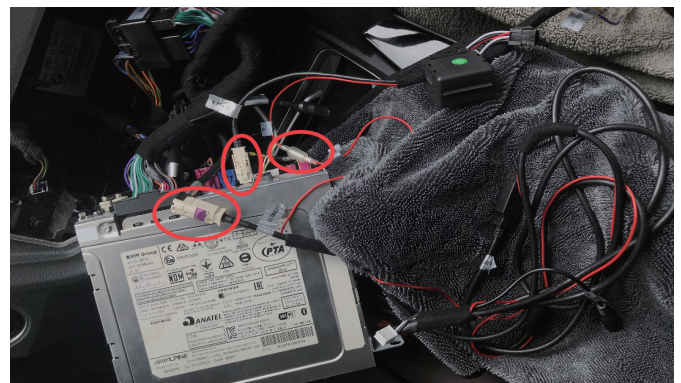

Remove USB cable fr HOST. Plug the Android 4 PIN Fakra to Host. Connect original USB plug (from HOST) with android USB cable(Fakra) And Connect well the +5V in USB cable with +5V in Android harness.