

2015-2019 NTG5.0 GLE/GLS W166/C292/X166 Installation Guide



1. Original Monitor(Please power off before installation)




2. Pry the decorative frame of the air conditioner knob



3. Remove the fixing screw



4. Pry out the frame of the host and take out the original host

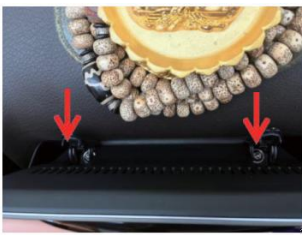

5. Take out the fixing screws and remove the original car screen




6. Take out the screws of the fixing base




7. Take out the fixing screws of the air conditioner panel



8. Pry out the air conditioner panel

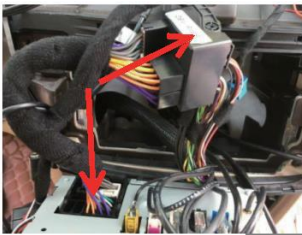

9. Connect the power cord plug of the original car to our ISO

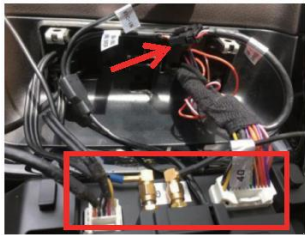

10. Put on the wire and connect to the Android screen



11. Install the fixed base of the Android machine



12. Transfer the USB-AUX interface on the ISO line to the USB interface on the armrest box



13. Effect picture after installation



14. Android Cables connector

- 1. 1.4G antenna
- 2. GPS antenna
- 3. Plastic tweezers
- 4. RCA Wire
- 5. USB audio decoder box
- 6. External microphone
- 7. screws
- 8. Power cable