

Installation Guide for 5 Series E60 2003-2010



1. Original Monitor
(Power off before installing).



2. Remove the fixed screws
from original monitor.



3. Pry loose and take out
the decoration strip.




4. Remove the fixed screws
of the panel.




5. Pry loose and take out
the panel.



6. Pry and take out the panel
of the storage box.

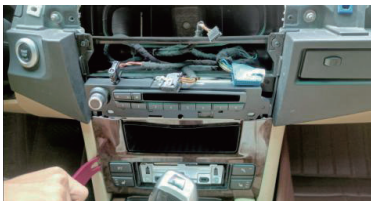


7. Pry and take out the storage
box.

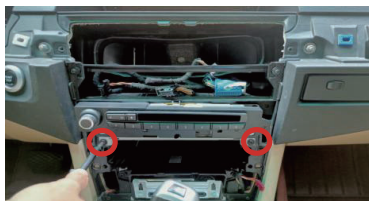

8. Remove the fixed screws
from the Host.



9. Remove the original power
harness and optical fiber, then
plug it with Android power
harness.

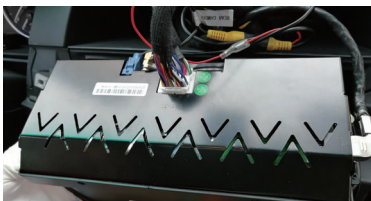

11. Plug well all the cables.



12. Effect picture after installation.