

# Installation Guide for X5(F15)/X6(F16) 2014-2017



1. Original Monitor  
(Power off before installing).



2. pry loose and take out the decoration strip.



3. Remove the fixed screws from panel.



4. Pry and take out the panel.



5. Pry and take out the air-conditioning panel.




6. Remove the fixed screws from original monitor.



7. Remove the fixed screws from original HOST.



8. Pry loose the net and take out the center speaker.

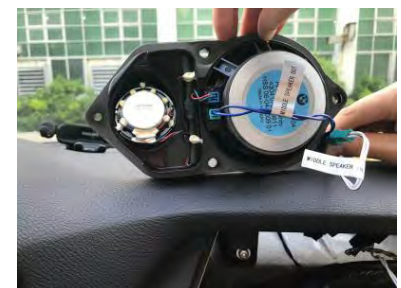

9. Connect well the center speaker cable with android cable.



10. Pull out the original power harness and optical fiber, then plug it with Android power harness.



11. Plug well all the cables.



12. Effect photo after installation well.