

# 2011-2018 Q3 Installation guide



1.The original car control (Power off before installation)



2.Pry out the air conditioning outlet panel



3.Remove the original screen fixing screws



4.Pried up the original car display



5.Remove the original engine with a lock



6.Switch to our power line




7.Pry open the main driver's side panel



8. Remove the left fixing screw



9.Remove the screws on both sides of the bottom of the main driving baffle

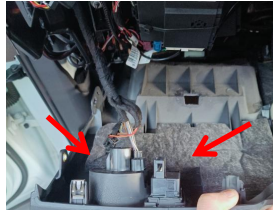


10.Remove the main driver's side baffle



11.Pull out the gateway connector and switch to our protocol line



12.Lock our machine base and hardware bracket, transfer protocol line baffle

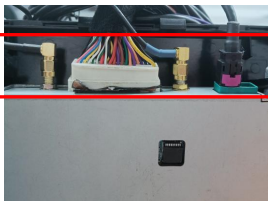

13.Adapter 4G,GPS,LVDS, power plug



14.Lock the hardware bracket screws




15.Installation completed effect drawing

## Android wire functional interface definition diagram



360 Camera power supply Front camera Rear camera

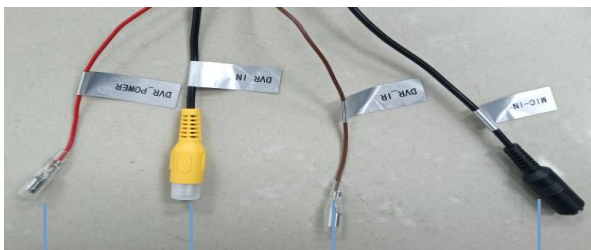

12V CVBS DVR DVR IR External microphone



AUX USB1 SIM card USB2