

# INSTALLATION MANUAL


for PEUGEOT 206



## INSTALLATION MANUAL




1. The original car center console.

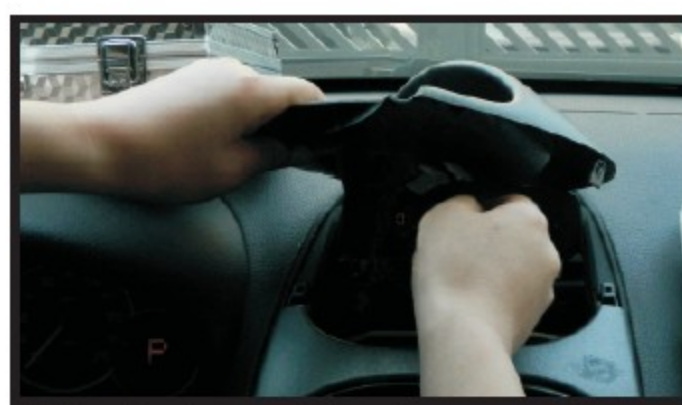


2. Pry the top small display screen frame with the crow plate, disconnect the back connection cables and take off it.



3. Take down the emergency button and small display screen from the frame carefully.

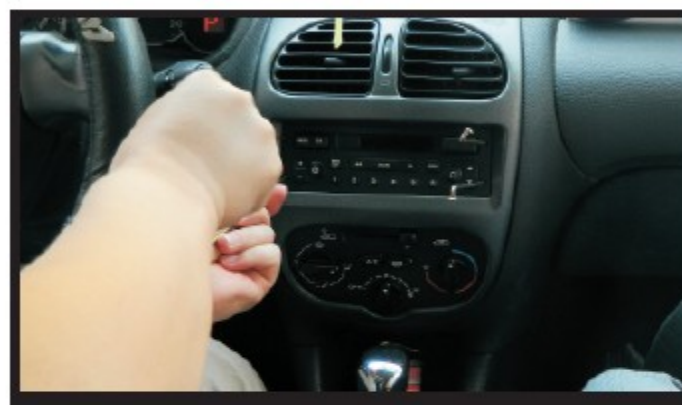

4. Insert the special tool into four small hole around the original car CD unit

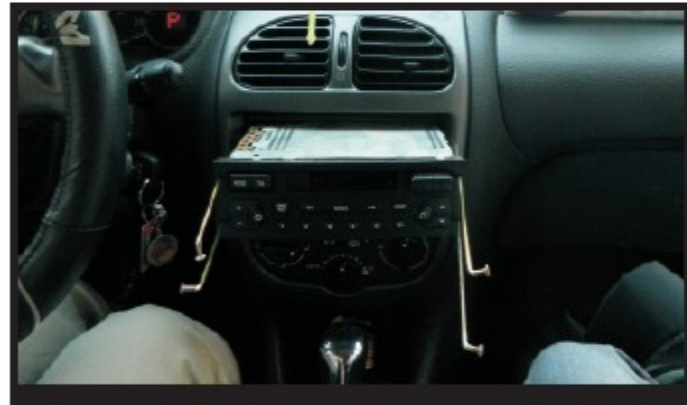

5. Pull the original car CD player out by the special tool



6. Unplug the back harnesses and take off the player



7. Take off the original control frame of the air conditioner.



8. Arrange the cable of original display screen on the right place like the red dotted line.


## INSTALLATION MANUAL



9. Connect the original small display screen with the cable



10. Put the original small display screen into the cabin as shown above

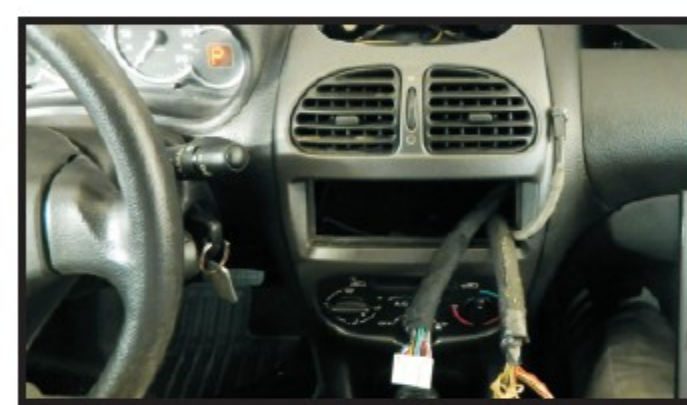

11. Reinstall the original control frame



12. Connect all the cables with the corresponding harnesses of our DVD player



13. Put our DVD player into the right place shown above



14. Connect all the cables with the corresponding harnesses of our display screen



15. Fix our display screen with the screws, tighten



16. Install the emergency button into our display screen frame

## INSTALLATION MANUAL



17. Connect the cable of emergency button and install the frame to the right place.



20. Installation finished, power on and check each function.

### ■ Precautions

1. Only the professional installing technicians are allowed to install and maintain this product.
2. Installation or maintenance by the unprofessional people might cause electric shock or other risks and even damage the unit.
3. In the process of connecting, pay attention to the hook position, don't pull wires forcibly to avoid invalid connection.
4. Please use the attached wire of the system, otherwise the accident of fire or smoke or damage to the unit or vehicle might be caused.
5. Don't cut off any extra wire which is kept for future use, protect the ends of wire with insulating tape.
6. In order to avoid short circuit, please disconnect the anode of the power accumulator before any connection and installation.
7. Ensure all lines are placed and protected in good condition, don't let them interfere in any moveable parts of the car such as steering wheel, gearlever, brake pedal, sliding chair, door or other parts.
8. The voice is input through AUX, so please ensure audio cable connects well with the AUX port of the original car audio system.
9. The Peugeot 206 GPS can be fit for Peugeot 206.