Warm Tips

- 1. Don't use strong chemical products, cleaning agents or detergents to clean the
- 2. Please use soft and clean cloth to clean the display screen; it is not advised to use
- paper to clean. 3. LED screen is easy to be scratched, please use touch pen to operate. Don't use sharp
- objects to write on the screen to avoid screen damage. 4. Do not maintain or install the product by yourself . The power must be cut off when the product is being installed. It is especially dangerous if the product is installed or maintained by the person without training or experiences of electronic equipment and car accessories installation.
- 5. Before installation, please confirm with the car owner whether the audio system of original car works normally and whether there are scratches or not.
- 6. Please protect the car instrument panel. Removed parts should be placed properly and the left-off parts should be saved with the original car radio. Try to use the screws from the original car to fix corresponding parts. Double USB cables should be extracted from the storage compartment of the co-pilot's position.
- 7. Navigation and back reverse camera is only for driving assistance and they cannot replace your attention and judgment while driving.
- 8. This installation manual mainly explained the installation method of our product. Please install the GPS antenna, back reverse camera and digital TV box and other parts through conventional ways.
- 9. When install the TV box, connecting "TV-CONT" cable can realize the touch control
- of TV.

 10. When using external microphone, the microphone can be fixed on the sunbreaker in
- front of the driver.

This files are only for reference, which is subject to change without notice. Our company interpretation the right to make final of this installation manual.



JAUNA **NOITAJJATZNI**





The original car center console.



Pry the air-conditioner vent; disconnect the back cables and take it out (be care of the clips).



Unscrew the gear handle.



Remove the left and right decorative plates around the gearbox.



lever and take it out.



Pry the small decorative plates before the gear Remove the decorative plates of the armrest box.



After the decorative plates of the armrest box is removed.



Remove the screws around the small storage



Take out the small storage box and disconnect the back cables.



Remove the screws underneath the air-conditi-






Take out the original car head unit and disconnect



After all the components are removed.

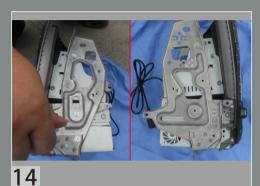


Remove the left and right brackets of the original car head unit.

Put the our unit together with air conditioner board






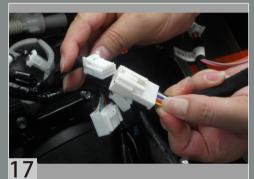

Connect well the AUX transfer cable as shown.



Connect the back cable of the original head unit.

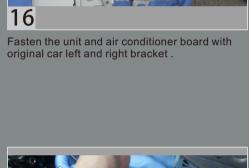



Connect the USB on the back of original head unit with the USB in Armrest box, wrap well with black tape.



Fasten the original clip with the original bracket



Put the dedicated roadrover unit well in the



Place the four screws well on the unit as shown.
Connect well the air conditioning vent cables,



and put it in right place.



Connect the back cables in storge box, fasten the screws.



Connect the back cables of the gearbox decorative plates.



Restore the gearbox decorative plates in place.



Restore the small decorative plates before the gear lever.



Restore the left and right decorative plates around the gear box.



Restore the gear handle.



Installation finished, power on and test each function