

# Installation Instruction

Model: CL-S6004A (For Volvo XC 90)

Tools: plastics scraper、 Sleeve、 Wire cutter、 sharp-nose pliers、

3M glue、 insulating tape

1、 Please unclench the net cover with plastic scraper and take it out.



2、 Please unscrew the screws with hex driver(driver must be sleeved.) and then take the plastic

sheet as the photos out.

3、 Take the socket out(Please note: Please take the socket out from the plastic sheet carefully, as there is a twistlock to connect the socket with the plastic sheet. )




4、 Connection of cables:

A. Please pull out the RED thick power cable of original car out , which can be found from the power supply box of trunk.

B. Connect the red power cable with the yellow cable (12+) of our unit.


C. Please pull out the purple thin power cable for original car and connect with the red cable of our unit.

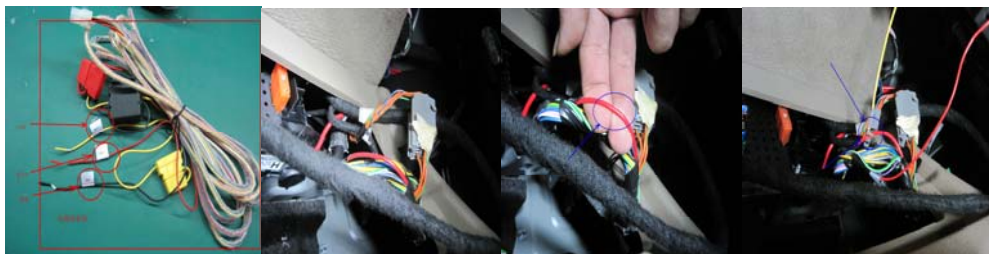


D. Please connect the blue cable (this is a cable which can control the parking function.)with the blue one of our unit.

# Installation Instruction

Model: CL-S6004A (For Volvo XC 90)

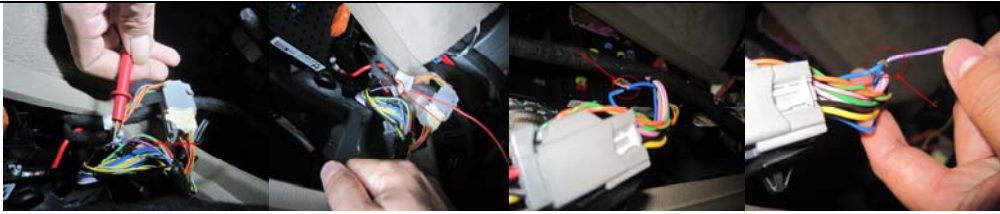

E. Connect the car handbrake cable with the brake line of our unit. And then unclunch the screw of the car(as highlighted in the circle in the below photo), connect the 2 lines with the GDN line of the car. Clunch the screw.

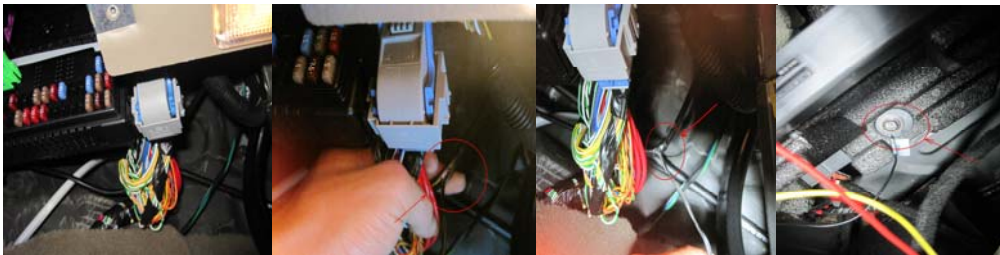

F. Connect the original AUX line and the monitor AUX line:

- 1) Connect the white and green lines of the car with GND line of AUX line with the unit.
- 2) Connect the white lines of the car and the unit.
- 3) Connect the dark blue line of the car with the red line of the unit.



5. Plug the power cables into the monitor and clunch the screws. Then fix the cover of the car.

